pmvmounts.co.uk

User instructions **PMVMOUNT2036F & PMVMOUNT2036T**
Universal up to 600mm X 400mm - 75Kg max weight limit.

- Read these instructions carefully before assembling this equipment.
- Check the equipment has been supplied with all parts and fixtures prior to assembly.
- Assemble in a suitable location.
- Do not attempt to alter or modify any part of the equipment or its attachments.
- Do not use if any parts are broken or appear to be damaged.
- Only use fixings provided with this product and use appropriately sized tools to securely tighten them.
- Do not position the equipment close to sources of heat or moisture.

Designed & Manufactured in the United Kingdom

1 Mount back plate to wall

1A - Use fixing point **1** in the centre of the backplate to hold the backplate on the wall whilst other fixing points are marked out once the backplate is made level - **Fig 1A**

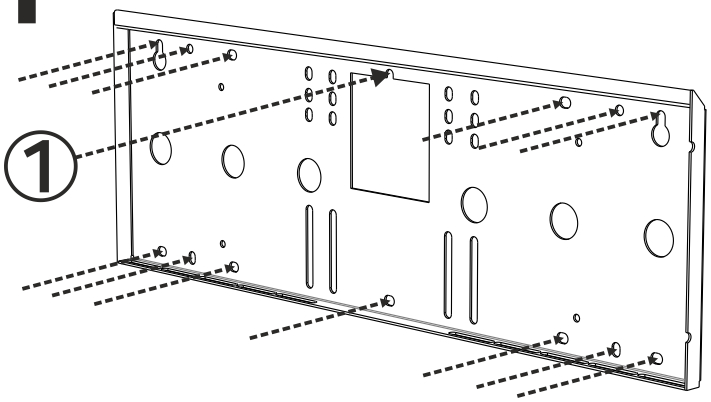

TV Fixing Kit

A - M6 x 30mm B - M8 x 30mm C - M8 x 50mm	X4	G - M8 x 6.5mm H - M6 x 6.5mm	X4
D - M8 x 20mm	X4	I - M8 x 6mm J - M8 x 12.5mm	X4
E - M6 washer F - M8 washer	X4	K - M6 x 20mm	X2

Also required

2 Mount arms to TV (flat or tilting arms install the same way)

2A - Use fixings to suit your TV - **Fig 2A**
2B - Insert shoulder washers in to holes in TV arms - **Fig 2B**
2C - Insert suitable fixings with washers - **Fig 2C**
2C - If required, use spacers between TV and TV arms - **Fig 2D**

Note: Flat arms from PMVMOUNT2036F are not handed and can be installed on to either side of the screen.

Note: To mount the screen in portrait simply rotate the screen 90˚ and secure the arms vertically.

Note: When using tilting arms the arms are handed. Install them so the centre fixing is facing outwards.

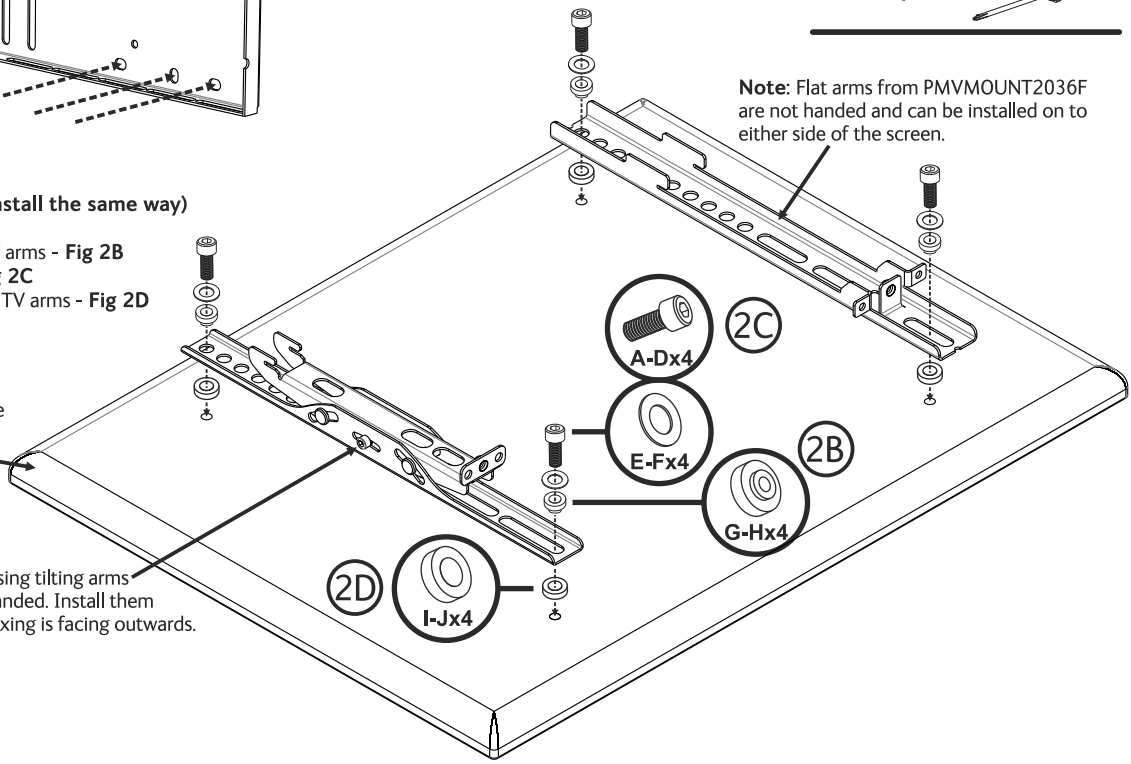

3 Hang TV on to backplate (tilt arms shown for illustration).

3A - Two persons should lift screen safely towards the backplate.
3B - Hook both arms over on to the backplate - **Fig 3B**
3C - After the TV is in place insert safety screws through the backplate's underside in to TV arms - **Fig 3B**

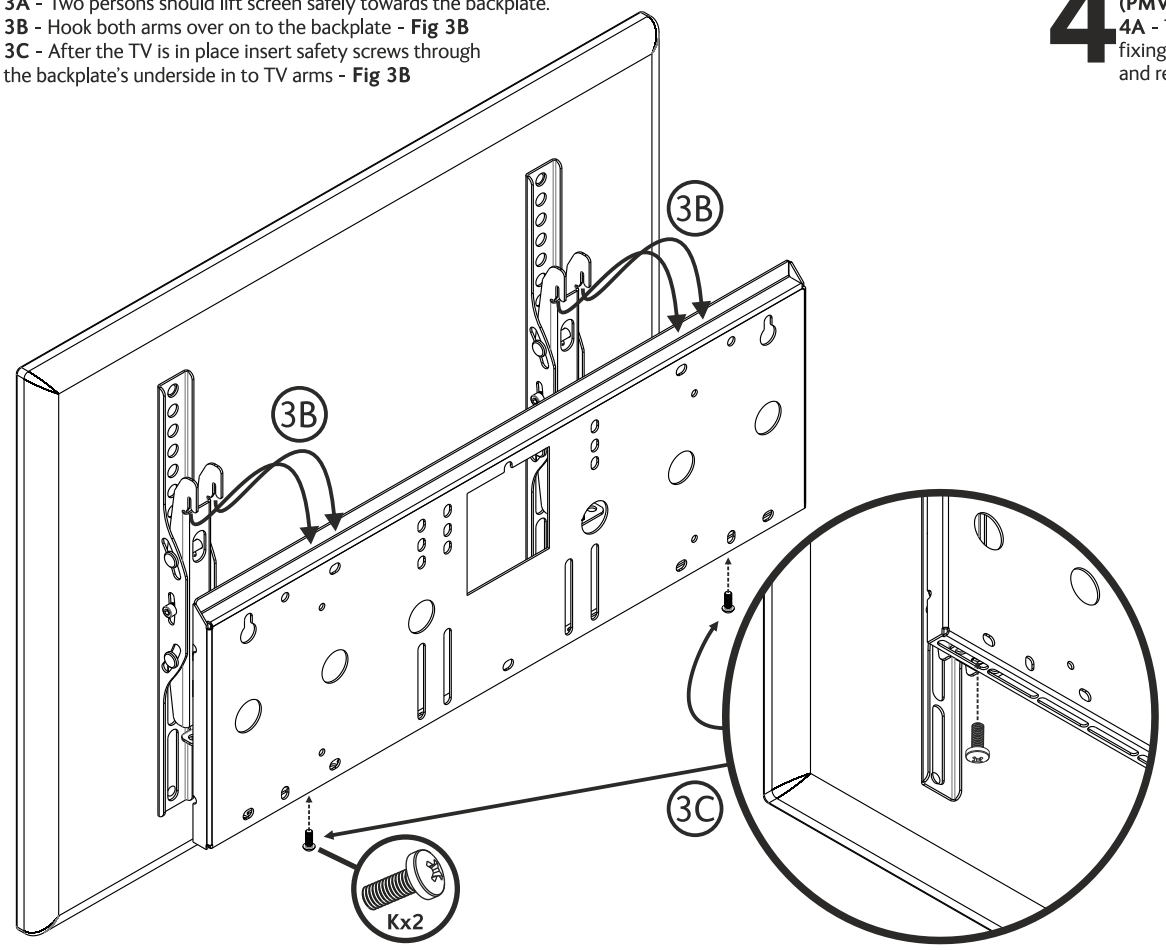

4 Tilt adjustment (PMVMOUNT2036T only)

4A - To adjust the tilt angle, loosen the centre fixing point on both arms, tilt screen evenly and re-tighten.